


SEWER – REFURBISHMENT OF CONCRETE PIPE

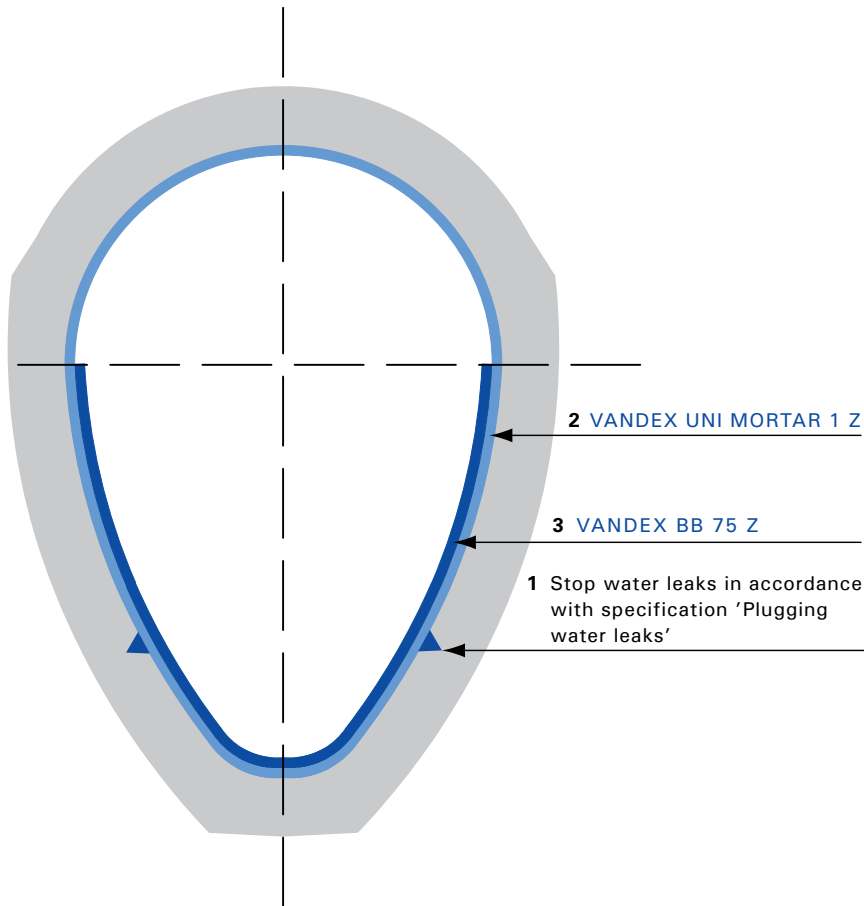

Application Instructions

- 1 Plug water leaks in accordance with the specification 'Plugging water leaks'.
- 2 Apply one layer of VANDEX UNI MORTAR 1 Z as surface leveller, also to increase the concrete cover to reinforcement.
- 3 Apply two coats of VANDEX BB 75 Z as final lining.

Remarks:

- The selection of the most appropriate water-proofing lining will depend on the type and aggressiveness of liquid stored and the anticipated abrasion stress.
- Substrate adhesion strength > 1.5 N/mm²

For further technical details and consumptions refer to technical data sheet or consult a technical Vandex representative.

The information contained herein is based on our long-term experience and the best of our knowledge. We can, however, make no guarantee since for a successful outcome, all circumstances in an individual case must be taken into consideration. Indications of quantities required are only averages which in certain cases might be greater.